 


Always wash hands & surfaces before processing water for consumption.

Parts



Care & Maintenance

Disassemble prior to storage



RINSE & AIR DRY AFTER EACH USE



AVOID DIRECT SUNLIGHT



COOL & DRY STORAGE AREA



NO EXTREME TEMPERATURE



SMALL PARTS CHOKING HAZARD

CONTACT YOUR LOCAL DEALER FOR MORE GREAT BERKEY® PRODUCTS

Black Berkey Primer™


Use to Prime & Purge your Black Berkey™ Elements



Read instructions prior to use.
Failure to read & follow all instructions may result in personal injury and/or void warranty.




Priming Setup

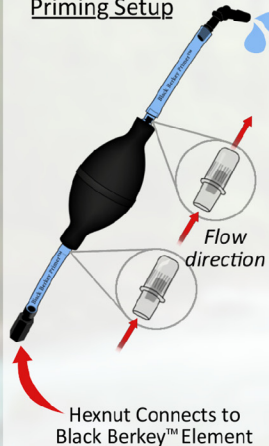

Direction of the Valves


Point both valves in the same direction (keep them in-line).

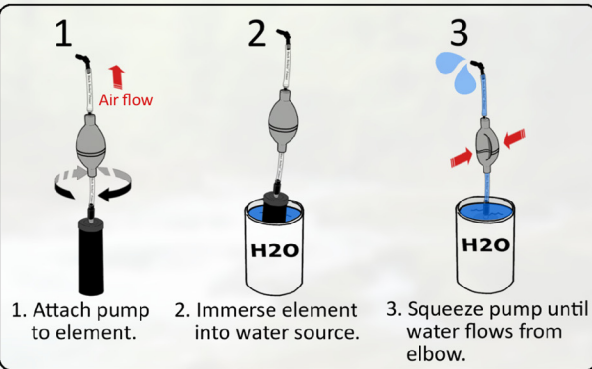

Priming your Black Berkey™ Elements saturates them with water, maximizing flow for production. For optimal results, prime your Black Berkey™ Elements after purging them.

Purging Setup

Purging your Black Berkey™ Elements expels water and clears filtered contaminants, improving flow & dry time for storage.

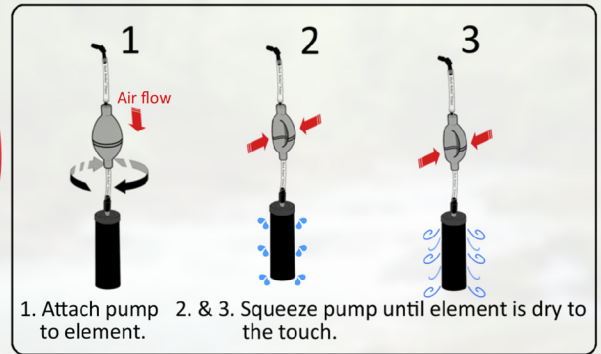

Change between Priming & Purging functions by simply removing the black attachments (hexnut & elbow) from the ends of their tubes and switching sides.